

Operator's manual

Inverter

FU 4, 5

Model	FU4, 5
Document	5000201424
Issue	08.2016
Version	07
Language	en

Copyright © 2016 Wacker Neuson Produktion GmbH & Co. KG

Printed in Germany

All rights are reserved, in particular the world-wide applicable copyright, right of duplication and right of distribution.

This document may only be used by the recipient for the intended purpose. The document may not be reproduced entirely or partially, or translated into any other language.

Reproduction or translation, even extracts thereof, only with written approval of Wacker Neuson Produktion GmbH & Co. KG.

Any breach of the statutory provisions, in particular the protection of copyright, will lead to civil and criminal prosecution.

Wacker Neuson Produktion GmbH & Co. KG is constantly working on the improvement of its products as part of the technical further development. Therefore, we reserve the right to make changes to the illustrations and descriptions in this documentation without incurring any obligation to make changes to machines already delivered.

Errors excepted.

The machine on the cover may have special equipment (options).



Manufacturer

Wacker Neuson Produktion GmbH & Co. KG

Preußenstraße 41

80809 München

www.wackerneuson.com

Tel.: +49-(0)89-354 02-0

Fax: +49-(0)89-354 02-390

Translation of the original operator's manual in German



1 Foreword

This operator's manual contains important information and procedures for the safe, proper and economic operation of this Wacker Neuson machine. Carefully reading, understanding and observing is an aid to avoiding hazards, repair costs and downtime, and therefore to increasing the availability and service life of the machine.

This operator's manual is not a manual for extensive maintenance or repair work. Such work should be carried out by Wacker Neuson service or by technically trained personnel. The Wacker Neuson machine should be operated and maintained in accordance with this operator's manual. An improper operation or improper maintenance can pose dangers. Therefore, the operator's manual should be constantly available at the location of the machine.

Defective machine parts must be exchanged immediately!

If you have any questions concerning the operation or maintenance, a Wacker Neuson contact person is always available.

Table Of Contents

1. Safety instructions	5
1.1 General	5
1.2 Operation	5
1.3 Safety checks	6
1.4 Maintenance	6
1.5 Transport	7
1.6 Maintenance checks	7
2. Technical data	8
3. Description	9
3.1 Field of application	9
3.2 Transport to work site	9
4. Operation	10
4.1 Putting into operation	10
4.2 Motor protection	10
5. Maintenance	11
5.1 Maintenance schedule	11
5.2 Slip rings	11
5.3 Carbon brushes	11
6. Electric wiring diagram	12
7. Diagram	13

1. Safety instructions

for 3-phase frequency and voltage convertes

1.1 General

- 1.1.1 Converters may only be operated by persons who
- * are at least 18 years of age
 - * are physically and mentally fit for this job
 - * have been instructed in operating with converters and proved their ability for the job to the employer
 - * may be expected to carry out the job they are charged with carefully.
- The persons must be assigned the job of operating converters by the employer.
- 1.1.2 Converters may only be operated if the operating instructions of the manufacturer relating to the specific product and these safety instructions are observed.
- 1.1.3 The persons entrusted with the operation of converters are to be familiarised with the necessary safety precautions relating to the machine. In case of unusual applications the contractor must compile and issue the necessary additional instructions.

1.2 Operation

- 1.2.1 The actuation (control) elements and safety equipment must not be inadmissibly tampered with or their operation prevented.
- 1.2.2 It must be ensured that the converter is only connected to the voltage and frequency specified on the nameplate. Choose correct cross section for extension cords.
- 1.2.3 Before the converter is commissioned, it must be ensured that the protective hoods are firmly installed.
- 1.2.4 Before the converter is commissioned, the machine must be installed in a stable condition to prevent it from unintentionally tipping over, slipping or falling.
- 1.2.5 The converter must not to be switched on and off by inserting the plug into the socket or pulling it out. This also applies to the equipment to be connected to the converter.

Safety instructions

- 1.2.6 The power supply cable of the converter must not be used to pull the plug out of the socket.
- 1.2.7 The power supply cable of the external vibrator must not be used to pull the plug out of the socket.
- 1.2.8 Electric equipment and material may only be used if they comply with the operational and local safety requirements. They must be in proper conditions and they must be maintained in this condition.
- 1.2.9 It is forbidden to operate converters in hazardous environments.



Danger to life

- 1.2.10 Do not expose electrical equipment to rain. Do not use electrical equipment in damp or wet surroundings.

1.3 Safety checks

- 1.3.1 Before starting operation, the operator has to check that all control and safety devices function properly.
- 1.3.2 Check electric cables regularly for damage.
- 1.3.3 Converters may only be operated with all the safety equipment.
- 1.3.4 If defects in the safety equipment or other defects are detected which impair the safe operation of the internal vibrator, the supervisor is to be notified without delay.
- 1.3.5 The machine must to be switched off immediately in case of defects jeopardizing the operational safety of the equipment.

1.4 Maintenance

- 1.4.1 Only use original spare parts. Modifications to this machine including the adjustment of the maximum speed set by the manufacturer are subject to the express approval of Wacker Neuson. In case of nonobservance all liabilities shall be refused.
- 1.4.2 The converter is to be disconnected from the mains supply for maintenance and repair work.
- 1.4.3 Work on the electric parts of the machines may only be carried out by skilled technicians.

- 1.4.4 The green/yellow protective earth conductor of the connection cable must be longer so that it does not become detached if the strain relief clamp fails. There is a danger to life and limb if this connection is broken. After repair work, check protective earth conductor for continuity.
- 1.4.5 All safety devices must be reinstalled properly immediately after maintenance and repair jobs have been completed.

1.5 Transport

- 1.5.1 For loading and transporting converters with lifting devices, suitable attachments are to be provided at the specified attachment points.
- 1.5.2 On transport vehicles converters are to be secured against slipping or tipping over.

1.6 Maintenance checks

- 1.6.1 According to the conditions and frequency of use, converters have to be checked for safe operation at least once every 6 months by skilled technicians, such as those found at Wacker Neuson service stations, and be repaired if necessary.

Please also observe the corresponding rules and regulations valid in your country.

Technical data

2. Technical data

		FU 4/200	FU 5z/200
Item no		0008890	0008891
Length x width x height	mm:	790 x 350 x 495	800 x 350 x 495
Operating weight (Ground)	kg:	64	75
Input ratings		Thtee-phase current 400 V 50 Hz	
Rated current	A:	10	13,2
Power input	kVA:	6,9	9,2
Output			
Voltage	V:	42 3 ~	
Rated current	A:	52	69
Frequency	Hz:	200	
Power input	kVA:	3,8	5
Socket		3 x 32 A	4 x 32 A
Drive engine		3-phase squirrel cage motor for connection to the mains	
Protection system		IP 44	
Sound pressure level 1 m Distance	L _{PA} :	77 dB(A)	80 dB(A)

3. Description

3.1 Field of application

For use in applications with Wacker Neuson 42 V / 200 Hz high frequency internal vibrators, 42 V / 200 Hz external vibrators.

3.2 Transport to work site

Conditions:

- * Only use suitable lifting equipment with a minimum lifting capacity of 80 kg for the transport of the converter.
- * Always switch off engine during transport!
- * Attach appropriate fastening means to central lifting point provided.
- * Tie down the converter securely during transport on the loading surface of a vehicle.

Note: Also refer to the specifications in safety instruction.

Operation

4. Operation

4.1 Putting into operation

4.1.1 Connection:

Make sure available voltage corresponds to voltage required for converter before connection. Factory setting is 400 V unless otherwise indicated when ordering. Use and correctly connect green-yellow cable lead of supply line to plug connection for equipment grounding conductor. Also pay close attention to a perfect connection of the equipment grounding conductor when using an extension line.

4.1.2 Switching on the converter:

Only switch on the converter under no-load conditions.

4.2 Motor protection

The overload circuit breaker is set to the rated current of the motor. In case the converter is switched off by means of the overload circuit breaker find out why and eliminate defect.

5. Maintenance

5.1 Maintenance schedule

Component	Maintenance work	Maintenance interval
Feed cable	Check for perfect condition, change if defective.	daily

5.2 Slip rings



- 5.2.1 The surface of the slip rings must be bright. If necessary, clean the surface, respectively polish with emery paper. Before, make sure that the converter is disconnected. Remove abrasive dust.

5.3 Carbon brushes

- 5.3.1 The carbon brushes should rest with entire cross section and with moderate pressure on the slip rings. Bed-in new carbon brushes only with currentless (dead) converter as follows: Put emery cloth with smooth side on slip ring such that the brushes rest on the abrasive side. Move emery cloth to and fro until brushes fit to the round shape of the slip rings. Remove abrasive dust.

Electric wiring diagram

6. Electric wiring diagram

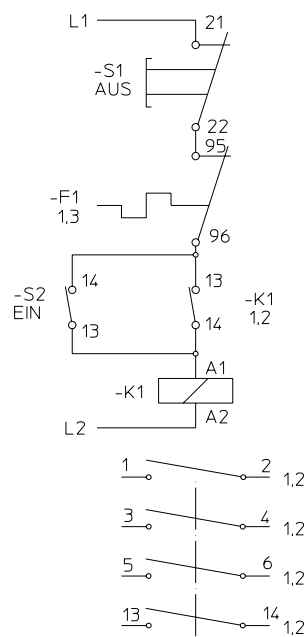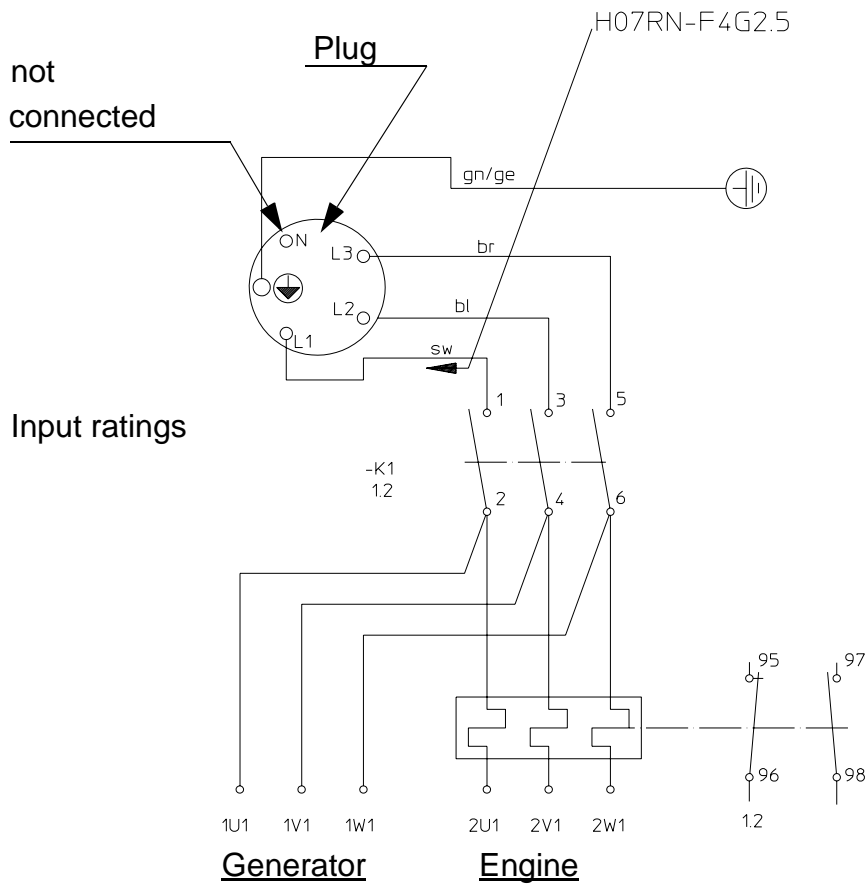

7. Diagram


Selection of required cross section for extension of cables and power lines

This procedure takes into consideration:

- * The ohmic and inductive resistance of the line with an admissible loss of voltage of 5 % and $\cos \phi = 0,8$ as per voltage-frequency-curve.
- * The admissible warming-up of the lines as per VDE standard (table of required minimum cross section).

Voltage - Frequency - Curves

Cross-section area of cable in mm^2

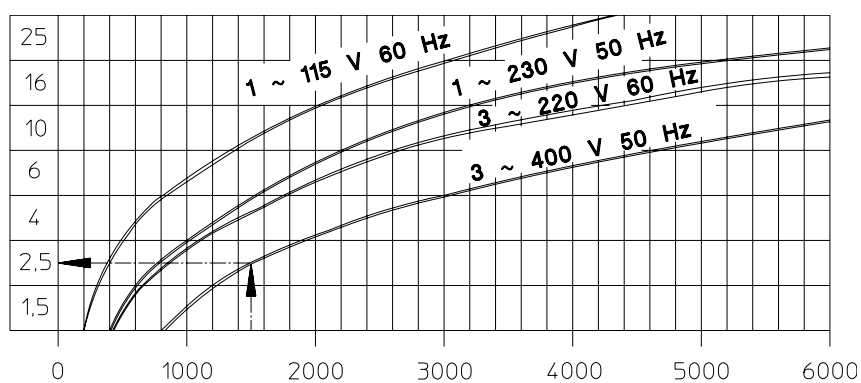

Rated current x length of cable A x m

Minimum cross-section area according to VDE		
Cable	Max. load	Max. fuse
mm^2	A	A
1	15	10
1,5	18	10/3~16/1~
2,5	26	20
4	34	25
6	44	35
10	61	50
16	82	63
25	108	80



EC Declaration of conformity

Manufacturer

Wacker Neuson Produktion GmbH & Co. KG, Preussenstrasse 41, 80809 Munich

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Product

Product	FU4	FU5z
Product type	Inverter	
Function of product	Voltage and frequency conversion	
Item number	0008890	0008891

Guidelines and standards

We hereby declare that this product complies with the requirements of the following guideline and standards:
2014/35/EU (2014-02), 2014/30/EU (2014-02), 2011/65/EU (2015-03), EN 60745-1 (2010-10), EN 60745-2-12 (2009-07), EN 61558-1 (2009-04), EN 61558-2-23 (2010-10), EN 61800-3 (2012-03)

Person responsible for technical documents

Robert R athsel

Wacker Neuson Produktion GmbH & Co. KG, Preussenstrasse 41, 80809 Munich

Munich, 29.08.2016

Helmut Bauer
Managing Director

